

ADNET CIRCULAIRE LARGE // GLASS MIRROR

ADNET COLLECTION

Designed by Jacques Adnet

PRODUCT



Item no.: 61070-XX
+ style code

DESCRIPTION

Few designers have succeeded in making a mirror a design icon but Jacques Adnet was the exception. Today, the elegant leather mirror that Adnet designed in 1950 provides inspiration for designers all over the world. His style is the epitome of luxury, so his 1950's collaboration with the exclusive French fashion house Hermès was a natural. In association with Hermès, Adnet developed a Collection of discreet yet voluptuous leather-covered furniture and interior accessories. This distinctive, round leather mirror with equestrian inspired detailing is a perfect example of Adnet's designs at that time. The mirror is available in either black, olive green or brown leather with strap and in three sizes: Ø45, Ø58 and Ø70 cm. The length of leather strap that supports the mirror is in direct proportion to the mirror diameter.

VERSION

- Tan Full Grain aniline leather / mirror glass
- Black Full Grain aniline leather / mirror glass
- Olive Full Grain aniline leather / mirror glass

MIRROR VERSION

Series contains the following:


Ø45, Ø58, Ø70



ACCESSORIES

Adnet hanging - Brass - Order item no.: 61000-99050

COLOURS

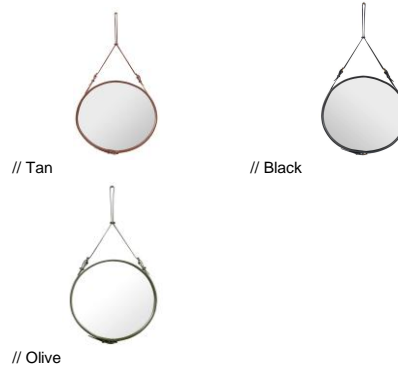

// Tan

// Black

// Olive

FACTS

MEASUREMENT

H:140 X Ø70 cm
Depth of mirror frame: 7 cm
Strap width: 2.3 cm
Leather thickness frame 4,5 X two layers: 9 mm
Leather thickness strap: 4,5 mm
Mirror glass 4mm according to EN 1036-2

WEIGHT ITEM

7,7 kg

PACKAGING TYPE

Cardboard box

PACKAGING MEASUREMENT - L X W X H CM

L:84 W:84 H:13,5 CM

WEIGHT PACKAGING - MATERIAL TYPE

- Delivery note: 10 g
- Certificate: 10 g
- Assembly instructions: 10 g
- Bubble postal bag: 10 g
- PE polybag: 5 g
- Mounting parts: 45 g
 - Bracket: Burnished brass
 - Drywall plug Driva TP12
 - Hanger bolt
 - Hexalobular socket key
 - Tack-It removable adhesive
 - Nylon dowel 8X40 mm
- Cardboard box outer packaging quality ---: 1544 g
- Cardboard box inner packaging quality ---: 1050 g
- Polystyrene EPS foam: 840 g

WEIGHT PACKAGING - TOTAL

11,5 kg

NUMPER OF PARCELS

1 pcs.

Designed by Jacques Adnet

CLEANING AND MAINTENANCE

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

ENVIRONMENT

Parts can be separated and sorted for recycling.

INSTALLATION INSTRUCTIONS

56-15-300-02 Mounting instr. Adnet Circular Mirror.

DK

RENDSERINGS

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

EN

CLEANING

For normal cleaning, vacuum or dust frequently with a clean, dry cloth. If leather is soiled, it can be wiped with a damp soft cloth and a lather of any mild soap and a minimum amount of lukewarm water. Do not spot clean leather; clean the entire surface. Wipe clean with a damp cloth and dry with a clean, soft cloth.

For spots and spills, wipe excess liquid immediately with a clean cloth or sponge; let the leather air dry. If further cleaning is necessary, sponge the entire surface with clean, lukewarm water. Let the leather air dry; never use a hair dryer or other heat source to dry leather.

For stubborn spots and stains, apply a mild, nonabrasive soap solution with a clean, wet sponge. Rinse well and let air dry. For butter, oil, or grease, wipe the leather with a clean, dry cloth and let the remainder of the oil dissipate into the leather. Do not apply water or try to wash a grease spot.

Do not use saddle soap, cleaning solvents, oils, furniture polishes, varnishes, abrasive cleaners, detergents, or ammonia on leather; they will ruin the finish, causing it to become sticky and cracked.

DE


REINIGUNG

Für normales Reinigen, saugen Sie häufig mit einem sauberen, trockenen Tuch ab. Wenn die Leder- oder Lederverkleidung verschmutzt ist, kann sie mit einem feuchten, weichen Tuch und einer geringen Menge milden Seifenlauge bei lauwarmem Wasser abgewaschen werden. Verwenden Sie keine Scheuermittel; reinigen Sie die gesamte Oberfläche. Wischen Sie mit einem feuchten Tuch ab und trocknen Sie mit einem sauberen, trockenen Tuch.

Für Flecken und Verschüttungen, wischen Sie überschüssige Flüssigkeit sofort mit einem sauberen Tuch oder Schwamm ab; lassen Sie das Leder lufttrocknen. Wenn eine weitere Reinigung erforderlich ist, wischen Sie die gesamte Oberfläche mit sauberem, lauwarmem Wasser ab. Lassen Sie das Leder lufttrocknen; verwenden Sie niemals einen Haartrockner oder andere Wärmequelle zum Trocknen des Leders.

Für hartnäckige Flecken und Verfärbungen, verwenden Sie eine milde, nicht-abrasive Seifenlösung mit einem sauberen, feuchten Schwamm. Spülen Sie gründlich ab und lassen Sie lufttrocknen. Für Butter, Öl oder Fett, wischen Sie das Leder mit einem sauberen, trockenen Tuch ab und lassen Sie den Rest des Öls in das Leder dissipieren. Versuchen Sie nicht, Wasser oder Wasser zu verwenden, um einen Fettfleck zu waschen.

Verwenden Sie keine Sattelseife, Reinigungsmittel, Öle, Möbelpoliermittel, Lacke, Schleifmittel, abrasive Reiniger, Detergenzien oder Ammoniak auf Leder; diese zerstören das Finish und machen es klebrig und spröde.

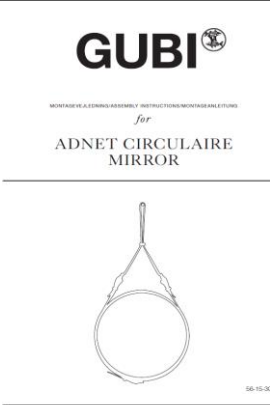

INDHOLD/CONTENTS/INHALT

1. DK: Monterings af holder.
EN: How to mount the bracket.
DE: Montage der Halterung.

DK: Træveg.
EN: Wooden wall.
DE: Holzwand.

DK: Betonvæg.
EN: Concrete wall.
DE: Betonwand.

MONTAGEVEJLEDNING
ASSEMBLY INSTRUCTIONS
MONTAGEANLEITUNG


ADNET CIRCULAIRE

2. DK: Monterings af metal skive til magnet.
EN: How to mount the metal spacer for the magnet.
DE: Montage der Abstandhalter für den Magnet.

DK: Monter den nærtliggende metaliske på væggen 25 mm fra bunden af spindel. Magneten på bagsiden af spejlet vil dermed sikres, at det altid hænger tæt ind til væggen.

EN: Mount the enclosed metal spacer on the wall 25 mm from the bottom of the mirror. The magnet on the back of the mirror will then ensure, that it always hangs close to the wall.

DE: Montieren Sie die beigefugte Metallscheibe in der Höhe von 25 mm vom unteren Ende des Spindels an der Wand. Der Magnet auf der Rückseite des Spiegels will dadurch sichergestellt, dass der Spiegel immer an der Wand hängt.

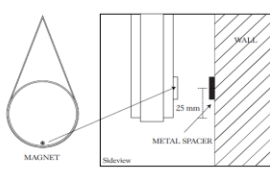

MINIMUM CEILING HEIGHT

